



ASSEMBLY INSTRUCTIONS STARSHADE 1700 PRO TENT:

Components:

- Tent
- 6 heavy tent pegs
- Peg puller
- Aluminium poles + lifting jack; the central pole
- 3 tape measures of 8.5 m each
- 6 side panels (optional)

- 1) Decide where you want to pitch the tent. Put a peg at the centre. (fig. 1).
- 2) Take one of the tape measures, attach one end to the centre peg and pull it towards you until it is completely unrolled (fig. 2). This is where you drive the first tent peg into the ground (fig. 2).
- 3) Use the remaining two tape measures to determine where to put the second tent peg. First, attach one end of the second tape measure to the first tent peg, then fix the other to the centre peg and ultimately, unroll both tape measures. Drive a tent peg into the ground where both tape measures meet. (fig. 3). Repeat for the remaining 4 pegs (fig. 4). Make sure to drive the pegs deep into the ground at an angle of 30°.
- 4) Attach the 6 'legs' of the tent to the pegs (fig. 5).
- 5) Assemble the central pole out of the pole sections you can find in the package. Ensure that the pole section with the lifting jack is near the bottom of the central pole. (fig. 6).
- 6) Put the central pole under the canvas and erect it until it is standing upright in the centre of the tent. (fig. 7, 8, 9). Place a piece of wood under the central pole if the tent is pitched on soft soil.
- 7) Lift the central pole until the tent is stretched taut. Be careful not to rip the canvas while doing so.

- 8) Zip the side panels to the tent by means of the two zippers at the top of every opening. To attach the side panels, you need to zip each zip fastener to either side of every tent opening.

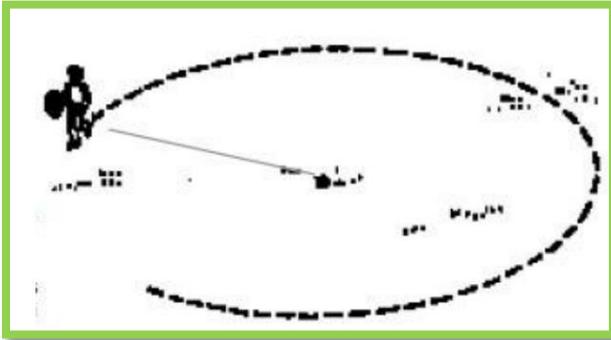


Figure 1



Figure 2

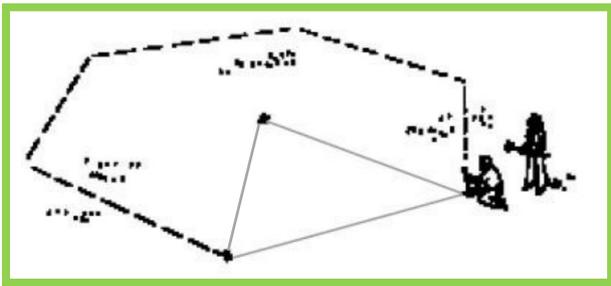


Figure 3

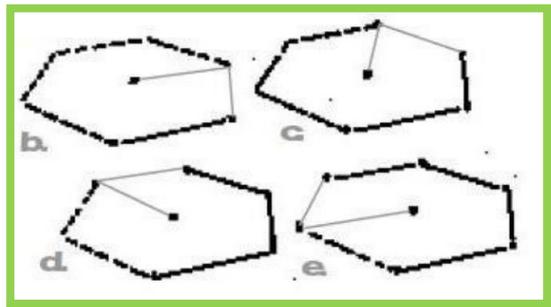


Figure 4



Figure 5

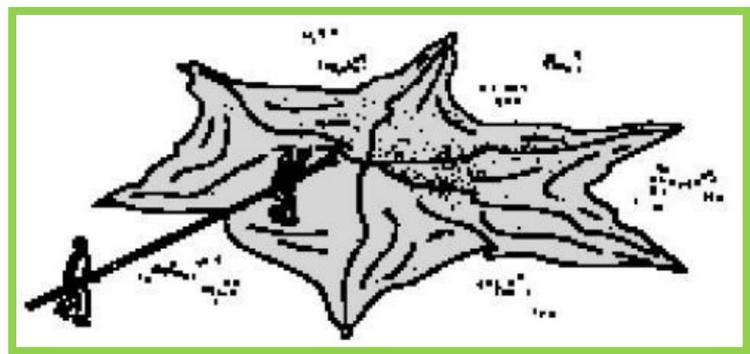


Figure 6

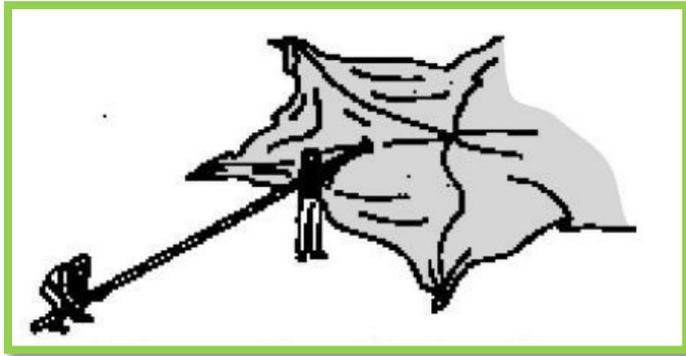


Figure 7



Figure 8

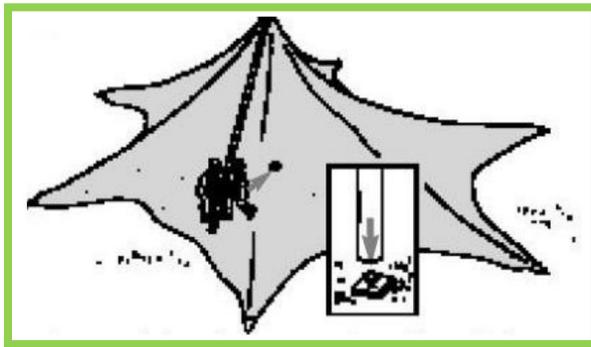


Figure 9



Figure 10

www.CanvasCamp.com