

SIBLEY® ULTIMATE PRO SETUP INSTRUCTIONS

Hello, and thanks for buying one of our PRO tents. Here is the best way to put up your tent: Our instructions are based on one person setting up the tent but the more people there are, the faster it goes up (with a little practice it should not take more than 6 minutes). A list of tips can be found at the end of this document to help you get years of use out of your tent, but the golden rule is:

**ALWAYS, WITHOUT FAIL,
STORE YOUR TENT BONE DRY
OR YOU RUN THE RISK
OF GETTING A MOULDY TENT!**

ENJOY!

Please don't hesitate to contact us if you have any more questions, good ideas on better ways of doing something or just to send in pictures for the gallery on the site.


Putting up an ULTIMATE PRO tent

▲ 1. Unpack the tent and lay out the groundsheet. Find the door and rotate the groundsheet so it's facing the desired direction (make sure the tags for pegging it down are on the outside and you don't have it inside out).



▲ 2. If the canvas is not already attached place the canvas on top of the groundsheet (again make sure it's the right way round and the guy ropes are outside) and line the door up with the doorway on the ground sheet.

TIP: Even though the groundsheet and tent may come separately we recommend you keep them zipped together and only unzip when you need a breeze. The tent is much faster to put up and down that way. If the total weight is too much to carry across a festival consider separating the tent and groundsheet and doing two trips to the car.

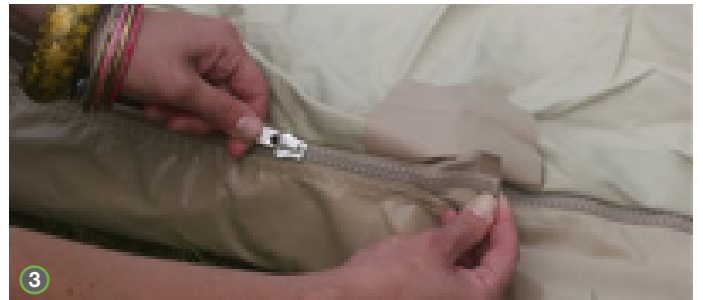

▲ 3. Zip the canvas and the groundsheet together all the way round (apart from the door).

▲ 4. Take the small pegs and, pulling the groundsheet tight, peg it out. The straps on the bottom of the walls are only to be used when the tent is pitched without its groundsheet!



▲ 5. Take the main straight pole through the door, find the centre of the cone and push the pole and tent up until it's vertical.



▲ 6. Put the A frame together and place inside the door (it's easier to get it through the door if you complete putting it together once inside). Put the spike through the hole at the top of the door and fit the feet into their holding pockets. Don't forget to put the little rain cap on top of the A-frame (from the outside) after you've installed it.

SIBLEY® ULTIMATE PRO SETUP INSTRUCTIONS



▲ 7. Zip the door shut and attach the first guy rope above the door using the large pegs. Then attach the rest of the guy ropes around the whole tent without putting any of them under too much tension.

NB:

- All the guy ropes need to follow the lines of the seams in the roof.
- Adjust the guy rope slider so you have approx 50cm of loop to the peg - this allows adjustment in both directions.
- It is important to make sure the PRO Tent stays symmetrical and that the tension is evenly spread.



▲ 8. Once all the pegs are in, adjust the guy ropes to create the desired tension. By doing it this way, and following the seam lines, your PRO Tent will look like this: perfect and without creases.

JOB DONE!!!

TIP:

If the door seems too tight, move the two guy ropes either side of the door in towards the middle of the door to relieve some tension.

Walls up?

If it's a hot day there is nothing better than rolling the walls up and letting the breeze brush over you. You can roll up the whole tent or just a section.

Simply unzip the section you want to pull up, roll the wall up from the inside and tie using the strings provided.



Mesh wall

Even with the doors open and the walls rolled up, you can still keep bugs and other unwanted visitors out by closing the Mesh Door and zipping the Mesh Wall in place.

Make sure the tent is well pitched and the tension is evenly spread all around before installing the Mesh Wall.

▲ Zip the Mesh Wall in place: zip the top of the Mesh Wall to the zipper sewn in between the wall and the roof of your tent. Start in the far end of the tent and work your way around, left and right, towards the front of the tent.

Now unzip and roll up the cotton side wall making place for zipping the bottom of the Mesh Wall to the ground sheet. All done! Enjoy!

How to pack up a PRO Tent & get it back into its bag!

Here are some tips on packing up your PRO Tent after use.

As stated all over the set up instructions, it is VITAL that your PRO Tent is stored bone dry otherwise it will get attacked by mould. Its fine taking it down damp, however you MUST ensure you hang it up to dry within 24 hours. You don't have to set the tent up again, just hang it on a washing line, over a car or over some chairs. Basically, it just needs some air.

This is how to get your tent back in the bag without hassle:

SIBLEY® ULTIMATE PRO SETUP INSTRUCTIONS

▲ 1. Take all the poles and pegs out of the tent whilst keeping the canvas off the grass - this helps keep your tent clean and grass stain free.



Without standing on the canvas, fold half of the tent over so you have a half moon with the groundsheet facing up.

▲ 2. Let that half of the groundsheet dry out and you might want to wipe off any mud or worm casks. If it's not a dry day you'll need to dry the tent out when you get home. The idea is that you always have canvas touching canvas and groundsheet touching groundsheet so even if the tent is wet you avoid stains. Once the condensation has dried off you need to flip the half moon over so the other half of the groundsheet can also dry out.

(We find it's a good idea to move the tent off its original spot to avoid putting the condensation back onto the first half)

▲ 3. Once the whole tent is dry you now need to fold the half moon over on itself again and again so you end up with a strip the width of the tent bag. The best way to do this is to put the bag at the top of the tent and use it as a template to get the right width.



4. Now fold the strip in half and place the pole bag and peg bag at one end. Roll the whole thing into a tight bundle using the ties to secure the tent as a roll. Last but not least, lift one end and slip the bag over the tent.

Bingo - you've done it!

Enjoy your PRO Tent, and remember: please only store it bone dry.

Many thanks, and feel free to call us if you get stuck.

Other info:

Cotton shrinks when wet, making itself waterproof when it rains.

The first time your tent gets wet it may leak a little, don't worry - THIS IS TOTALLY NORMAL!!

Once it dries out for the first time that shrinkage closes up any little holes to ensure it won't happen again.

The canvas has been impregnated to protect it from dirt, ultraviolet radiation and fungus. This makes it mould resistant but not mould proof.

If the canvas remains damp in a place where mould can grow, eventually mould will grow. If you put your tent up in a damp corner of the garden next to a hedge or under a tree long term it will eventually get mouldy (as would a car or anything left there). Therefore, it's worth considering the right spot that has some ventilation as mould is not covered by the manufacturer's warranty.

Advantages of a cotton canvas tent:

- ▲ Strong
- ▲ Breathing and humidity regulating

Disadvantages of a cotton canvas tent:

- ▲ Dries slowly
- ▲ Sensitive for dirt and fungus

Maintenance:

- The cotton must be bone dry before storing the tent.
- Never keep the tent stored away wet for longer than two days otherwise fungus can affect the canvas which will then create permanent little, black dots.
- The canvas has been impregnated with anti-fungi and made waterproof that is effective for up to 4 to 6 months of use. Once you have passed this period of camping you will need to re-proof the fabric in order to keep your tent as new.
- Maintenance starts when setting up your PRO Tent. If a PRO Tent has not been set up correctly uneven forces will pull on the canvas. This could eventually lead to damage. To ensure your tent stays set up correctly daily guy rope maintenance is necessary.
- It is in your interest to keep the canvas as clean as possible and remove stains as soon as they appear. Dust and dried mud is best removed once the canvas is dry by brushing with a clean hard brush like a floor scrubbing brush.

SIBLEY® ULTIMATE PRO SETUP INSTRUCTIONS

Lifespan:

The lifespan of your tent is very dependent upon camping conditions such as air pollution, ultraviolet radiation, natural dirt (bird droppings, sand, salt water) and domestic dirt (cooking stains, soda, wine, sun cream), as these all limit the lifespan of your cotton canvas tent.

When cared for your tent should be good for 60+ weeks of use.

Zippers:

Zippers sometimes have to endure extreme tension caused by wind, incorrect tent set ups or pressures caused by people or objects leaning into the tent.

In order to limit damage to any zippers -

- close all zippers before setting up your tent
- handle the zippers with care
- protect them by treating them with silicones once in a while
- verify zippers before setting up your tent, as there is no insurance on them after use

Fungus and stains:

Due to insufficient ventilation, fungus can affect the canvas. It is important to store your tent dry so no fungus or other stains can appear. If you have to temporarily store the tent wet be sure to remove the mud and dirt from the bottom of the tent and put your tent back out to dry within 48 hours.

In order to limit fungus and stains on your tent -

- store your tent 100% dry
- (when dealing with fungus) use a soft brush or sponge and a lot of fresh water. Only use specialised tent cleaning product to remove difficult stains as other chemical products can cause the cotton to leak. We suggest you have your tent re-impregnated with waterproofer if any area has been cleaned using a cleaning product.

Leaking:

Cotton can, when new, let some air through and leak around the seams. After the canvas has been wet once this will no longer happen because of the cotton expanding. Very light stains can appear on a wet tent - these stains cause no problems.

In order to preserve your tent's water resistance and prolong its lifespan after a considerable amount of use, the outside of the canvas can be re-treated with a sealant. There are many good spray can sealants on the market, and we also sell re-proofer.

